



Coaxial Cable/Plug Attachment


TYPE N

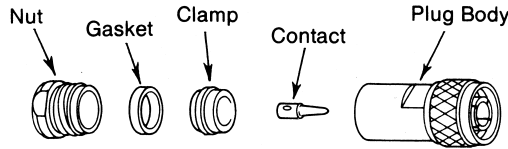


Coaxial Cable
 RG-8/U
 RG-9/U
 RG-213/U
 RG-214/U
 RG-225/U




STEP 1 . . . Place nut and gasket with "V" groove toward clamp over cable and cut jacket to the dimension shown.

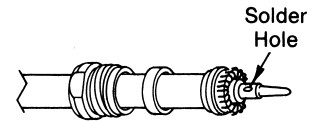


STEP 4 . . . Fold back braid as shown, trim to proper length and form over clamp as shown. Solder contact to center conductor.



STEP 2 . . . Comb out braid and fold out. Cut off cable dielectric to the dimensions shown.



STEP 3 . . . Pull braid wires forward and taper toward conductor. Place clamp over braid so that the inner shoulder fits against the end of the cable jacket.



STEP 5 . . . Insert cable and parts into connector body. Make sure sharp edge of clamp seats properly in gasket. Tighten nut.

TECHNICAL REFERENCE